


## Change Column Header

Modified by Jason Howie on Oct 8, 2014

### Other Related Resources

[Drill Table \(Object\)](#)

Parent page: [PCB Dialogs](#)

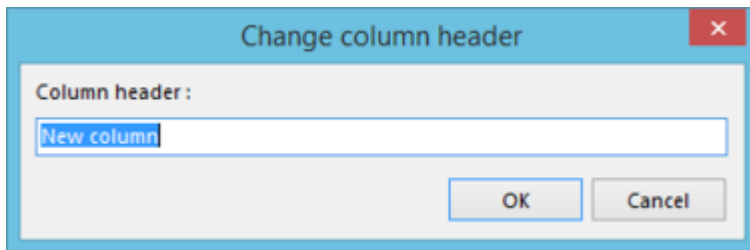

The *Change Column Header* dialog.

## Summary

This dialog allows the designer to change the header for an existing column in the selected Drill Table. Both default and custom columns can have their headers changed.

## Access

The dialog is accessed from the PCB Editor, through the *Drill Table* dialog. Select the column then click the **Change Header** button, or right-click in the column and choose **Change Column Header** from the context menu.

The *Drill Table* dialog is accessed by double-clicking on the required, placed drill table object.

## Options/Controls

- **Column header** - this field displays the current header naming for the column. Enter new naming for the header as required.

---

### Source URL:

[http://documentation.circuitmaker.com/display/CMAK/PCB\\_Dlg-ChangeColumnHeader\(\(Change+Column+Header\)\)\\_CM](http://documentation.circuitmaker.com/display/CMAK/PCB_Dlg-ChangeColumnHeader((Change+Column+Header))_CM)